


# TACKY Entrance Mats

Make contamination control easier

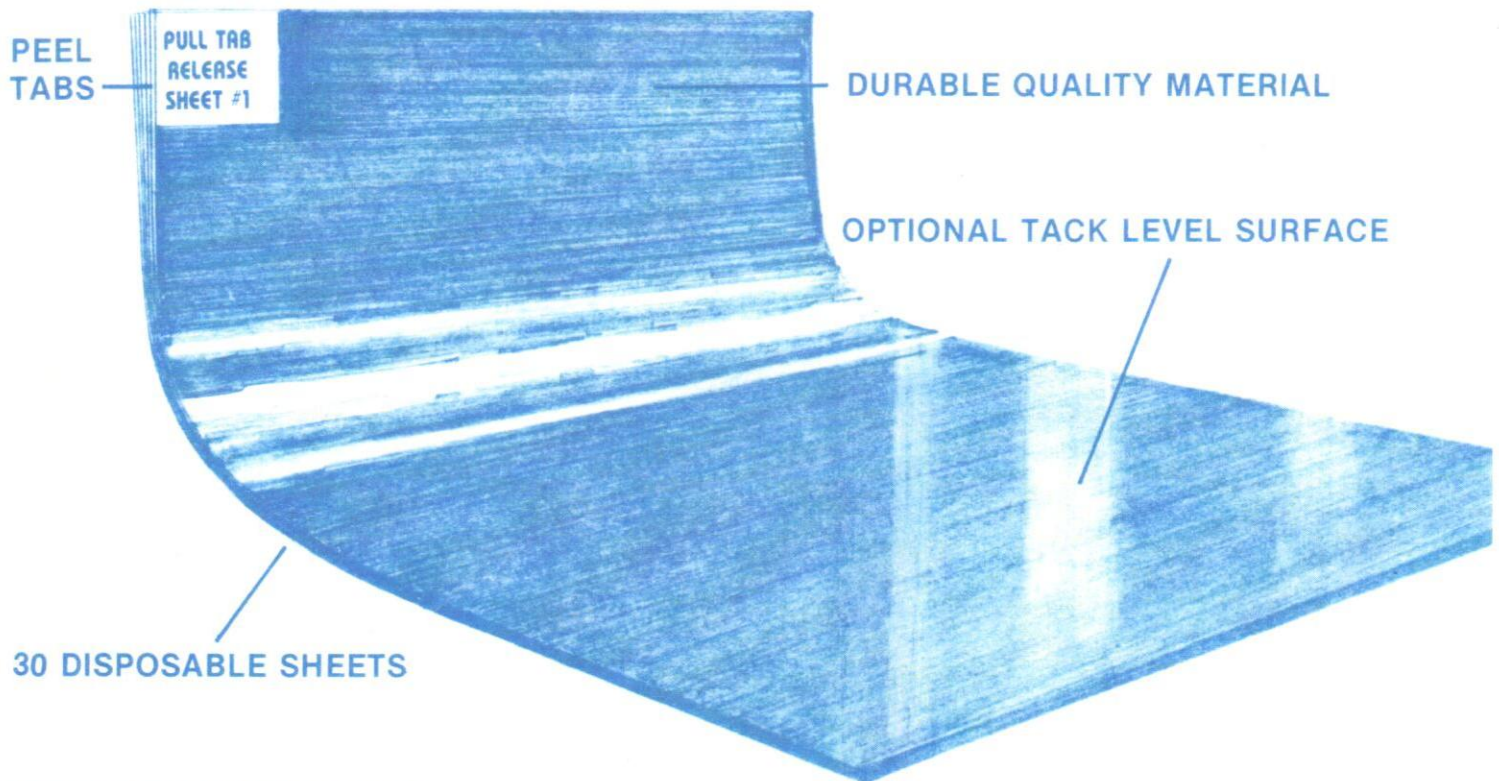

## INSTRUCTIONS:

- Make certain the floor where the entrance mats are to be installed is free of moisture, dirt, oil, etc.
- Remove protective film exposing double face backing. Mat is now ready to attach to the floor.
- After installing mat to desired position, bond mat to floor by pressing firmly on mat, especially all edges.
- Before pulling release marked "This Side Up". Walk on entire mat to increase adhesion to floor.
- Entrance mat is now ready to be used. When sheets get soiled, simply pull tab and expose clean POLY-TACK mat.

## SIZES AVAILABLE:

One piece sizes:

|         |         |
|---------|---------|
| 18 x 36 | 26 x 45 |
| 24 x 36 | 36 x 45 |
| 36 x 36 | 40 x 48 |
| 18 x 45 | 36 x 60 |
| 24 x 45 |         |

Custom sizes available

SPECIALIZED CLEANING  
OF MISSION CRITICAL  
ENVIRONMENTS



4 Sand Cut Road, Unit #6  
Brookfield, Connecticut 06804  
P 203.885.0174 • F 203.885.0175  
[www.specclean.com](http://www.specclean.com)